



BY PRO-JECT AUDIO SYSTEMS

INSTRUCTIONS FOR USE Pro-Ject AD Box S2 Phono

Dear music lover,

thank you for purchasing this **AD Box S2 Phono** from Pro-Ject Audio Systems.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



Warning of a hazard for the user, the unit or possible misuse



Important notice

Safety instructions


AC outlet voltages vary from country to country. Before connecting to the mains, make sure that the voltage in your area meets the voltage requirements printed on the power supply.

The power supply is used to disconnect the unit from the mains. Make sure that the power supply is easily accessible at all times. Never handle the device, the power supply while your hands are wet or damp.



Avoid letting liquids enter the device or the power supply. Never place any item containing liquid, such as a flower vase on or near the device. Never spill any liquid on the device or the power supply. Never place any naked flame sources, such as lighted candles on or near the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

Connectors

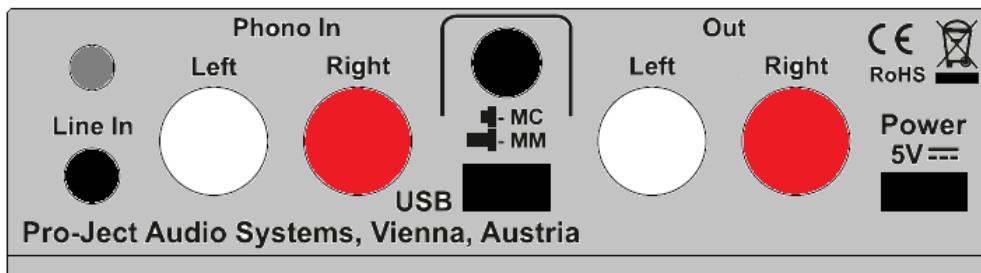

Make all connections whilst the phono amplifier is disconnected from the power supply.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.



Do not connect the phono amplifiers output to a phono input (sometimes labelled **gram**, **disc** or **RIAA**) on the amplifier.

Never use any other power supply than the one supplied with the unit.

Connecting the record player or a line level source

Connect the tonearm signal lead to the sockets **Phono In** of the phono amplifier. The earthing wire of the tonearm signal lead may be connected to the screw terminal if you encounter hum problems when using the record player. The signal lead of a line level source has to be connected to the socket **Line In**.

Setting the cartridge mode

The phono amplifier can be used in either MM (for moving magnet and high-output MC cartridges) or MC (for low-output MC cartridges) mode according to the construction principle of the pickup cartridge to be used. Since most cartridges use the MM principle the phono amplifier is factory set to operate in this mode. To find out which type your cartridge is please consult the literature accompanying your cartridge. If in doubt please consult your dealer.

A switch at the back of the phono amplifier sets the correct level of amplification for the cartridge.



Before setting MM / MC mode the unit must be disconnected from the power supply and amplifier.


Connection to the amplifier

Connect the **Out** of the phono amplifier to a line input (such as **AUX**, **CD**, **Tuner**, **Tape** or **Video**) on your amplifier.

Mains power connection

Connect the low voltage plug from the power supply to the **Power 5V DC** socket of the phono amplifier before connecting the power supply to the mains.

Front panel controls

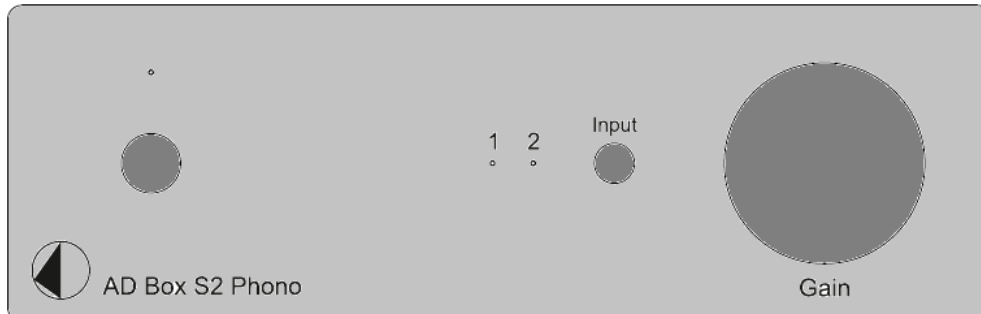

To switch on from standby or to standby

The push button on the left hand side will toggle the phono amplifier between its fully operational status and standby. The blue LED above the stand-by push button shows that the unit is switched on.

Input selector

Press the push button next to the two LEDs to switch between the inputs **1** (record player) and **2** (line level source). The selected input will be shown by the corresponding LED on the front panel.

Setting the record level

In case of distorted playback of the recorded music, the level of the analogue signal going to the A/D converter can be reduced with the level control (**Gain**) on the front panel.

Connecting to a Computer

Connect the USB-output of the unit to a free USB-socket on your computer and turn it on/make sure it is powered on.

The "new hardware found assistant" will automatically detect the unit and announces it as a **Microphone USB audio codec**. There is no need to install a driver manually.

After installation, one setting has to be done. For example - Windows 7® operating system:

→ Control Panel → Sound → Recording → **Microphone USB Audio CODEC** → Properties →

Advanced: set to **2 channel, 16 bit, 48000 Hz (DVD Quality)**



Please note: Connection should be made to an USB-socket of your computer directly. Connecting to USB-hubs or switches can cause problems.

Recording Programme

In case you do not have a recording programme installed on your computer, you may download one free from the Internet. Recording programmes can be found easily on internet.



*In the menu of the recording programme, source or input may have to be set to **Microphone USB audio codec**. Please be aware that downloads from the Internet are made entirely at your own risk. Under no circumstances can Pro-Ject Audio Systems carry responsibility or provide support for third-party software products sourced from the internet or for any damage or problems arising from the use thereof. All downloads should be checked with an up-to-date anti-virus programme. License fees may be applicable.*

Technical specifications Pro-Ject AD Box S2 Phono

^A Typical for low output MC cartridges, ^B typical for MM or high output MC cartridges

Input capacitance/input impedance, MC:	100ohms/120pF ^A
Input capacitance/input impedance, MM:	47kohms/120pF ^B
Gain MM/MC:	40dB/56dB
Gain, line level input:	11dB
Max. output	5Vrms / 1kHz
Noise floor, MM / MC:	94dB (A weighted) / 75dB (A weighted)
THD, MM / MC:	<0,003% / <0,02%
RIAA-equalisation curve accuracy:	20Hz - 20kHz / max. 0,5dB
A/D converter:	Burr Brown PCM2904 16-Bit Delta Sigma
Sampling rates:	32, 44,1 and 48kHz
USB output:	5 pin mini b connector
USB signal:	digital serial data protocol USB 1.1
Inputs (Phono-In / Line-In):	1 pair RCA/phono sockets / 3-pole 3,5mm co-axial jack
Analogue output:	1 pair RCA/phono sockets
Outboard power supply:	5V/1A DC
Power consumption:	300mA DC, <1W in standby
Dimensions W x H x D (D with sockets):	103 x 37 x 127 mm
Weight:	330g without power supply

Service

Should you encounter a problem which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only if the problem cannot be resolved there, the unit should be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or changes to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.

Copyright, trademarks

Pro-Ject Audio Systems is a registered Trademark of H. Lichtenegger.

This guide was produced by: Pro-Ject Audio Systems
Copyright © 2017. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

Windows 7®, Windows 8®, Windows 10® are trademarks of the Microsoft group of companies.