



BY PRO-JECT AUDIO SYSTEMS

INSTRUCTIONS FOR USE

Control it DS/RS

Dear music lover,

thank you for purchasing an universal remote from Pro-Ject Audio Systems.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



Warning of a hazard for the user, the unit or possible misuse



Important notice

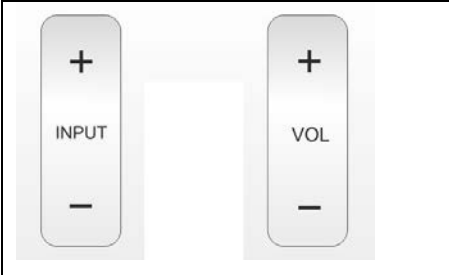

Safety instructions




Avoid letting liquids enter the device. Never spill any liquid on the device.

The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

	The 4 push buttons in second row correspond to a unit or a group of units with common remote codes. Press the appropriate button to select the unit you want to control. The buttons usually carry the same texts as original remote control (exceptions as described below - e.g. press "STRM" and then use the remote in the same way as the original Stream Box remote)
	 CD Box S, CD Box, CD Box DS, CD Box DS2T, MaiA CD, MaiA, MaiA Pre, Pre Box RS, Pre Box DS, Pre Box DS2 Analogue, Pre Box S, Stereo Box RS, Stereo Box S, Stereo Box DS - <u>with full control</u> Limited control* of following units: all Dock Box models, Receiver Box S, Tuner Box S: (* Volume +/-) Media Box S: (* on/off using "OK", play, track +/-)
	 Stream Box RS, Stream Box DS (DSnet, DS+, DSA, DS2)
	 Pre Box RS digital, DAC Box RS, Pre Box DS2 digital, Maia DS (DS2)
 CD Box RS	

	<p>Input and Volume control for all RS products* and PRE group of products. (*except Pre Box RS)</p> <p> Please note: Buttons input +/- , volume +/- and mute do not work with CD group of products, because there are dedicated buttons for these functions (see below)</p>
---	---

 Please note: This universal remote includes all the functions from the original remote controls and only these functions will work: e.g. original remote of Pre Box DS has 5 buttons, so only 5 buttons on universal remote will have functionality!



Red power	ON/OFF
Shuffle, Repeat	0 (toggles between repeat 1/ repeat all/ shuffle/ standard playback, if the key "+ 10" was not pressed before)
↑	Input + (for CD group of products, Pre Box RS)
Fol+	" + 10" (for CD Box S, MaiA CD)
←	Volume - (for CD group of products, Pre Box RS)
OK	ON/OFF (for CD group of products, except: all CD players, Receiver Box S, Tuner Box S)
→	Volume + (for CD group of products, Pre Box RS)
↓	Input - (for CD group of products, Pre Box RS)
⏮	Track -
■	Stop
⏸	Play / Pause
⏭	Track +
1-9	1-9
0	0 (after pressing the key "+ 10")



Red power	ON/OFF
"blank" button	Pre Box DS2 digital: activates filter settings, please refer to manual for detailed description
Mode	Pre Box RS digital: Switch between DAC1/DAC2 Pre Box DS2 digital: Sound mode switch MaiA DS: Pairing confirmation
Mute	Mute
1-9	1-9
0	10



Please refer to your CD Box RS manual for detailed description of the buttons. This universal remote includes all the functions from the original CD Box RS remote control.



Please refer to your Stream Box manual for detailed description of the buttons. This universal remote includes all the functions from the original Stream Box remote control.



When switched to STRM, buttons Input + and – and Volume + and – works only for Streamers with built in amplifier. For Volume and input settings of other units such as amplifiers, use CD or PRE.
e.g: To increase volume when playing Stream Box DS net connected to Stereo Box DS. Press CD > then press right arrow → to set desired volume level, then press STRM to set remote back to Stream Box DS net control

Technical specifications

Batteries: 2 x AAA / 1,5V
Dimensions W x H x D: 48 x 22 x 235mm
Weight: 105g

Replacing batteries

Proceed as follows:

- Unlock and remove the battery case cover
- Replace the batteries. Make sure the batteries are the right way round!
- Refit the battery case cover



Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.

Service

Should you encounter a problem, which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there, the unit should be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons, release the manufacturer from any liability over and above the lawful rights of the customer.

Copyright, trademarks

Pro-Ject Audio Systems is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Pro-Ject Audio Systems
Copyright © 2017. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.