

 


BY PRO-JECT AUDIO SYSTEMS

INSTRUCTIONS FOR USE

Control it

The six push buttons correspond to each unit. Press the appropriate button to select the unit you want to control, then press the required function buttons. Blanked out buttons do not carry a function, for the unit selected.

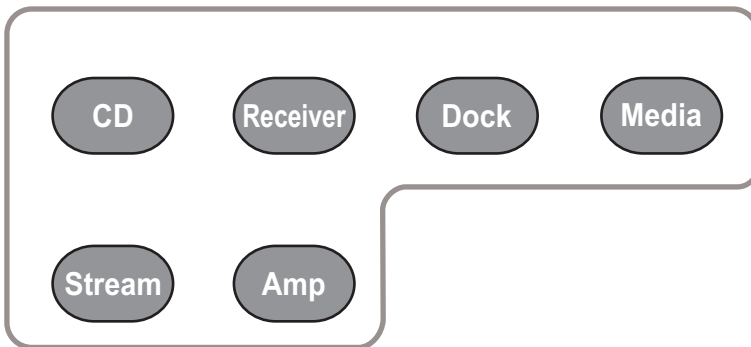

CD

Integrated CD-player

Receiver

Receiver Box and Tuner Box

Dock

Docking Station

Media

Media Box

Stream

Stream Box

Amp

Pre amplifier, integrated amplifier, Juke Box and Juke Box Esprit

Pre amplifier, integrated amplifier, Juke Box and Juke Box Esprit





press 



short press turns the unit on, long press takes it back into standby.

 
Powered on, a short press activates and deactivates mute *.

VOL  and  adjust the sound volume of the pre amplifier, integrated amplifier, receiver or Juke Box and Juke Box Esprit.

CH  and  select the inputs in turns.

* mute - Pre Box SE, Pre Box DS and Stereo Box DS only

Receiver and Tuner

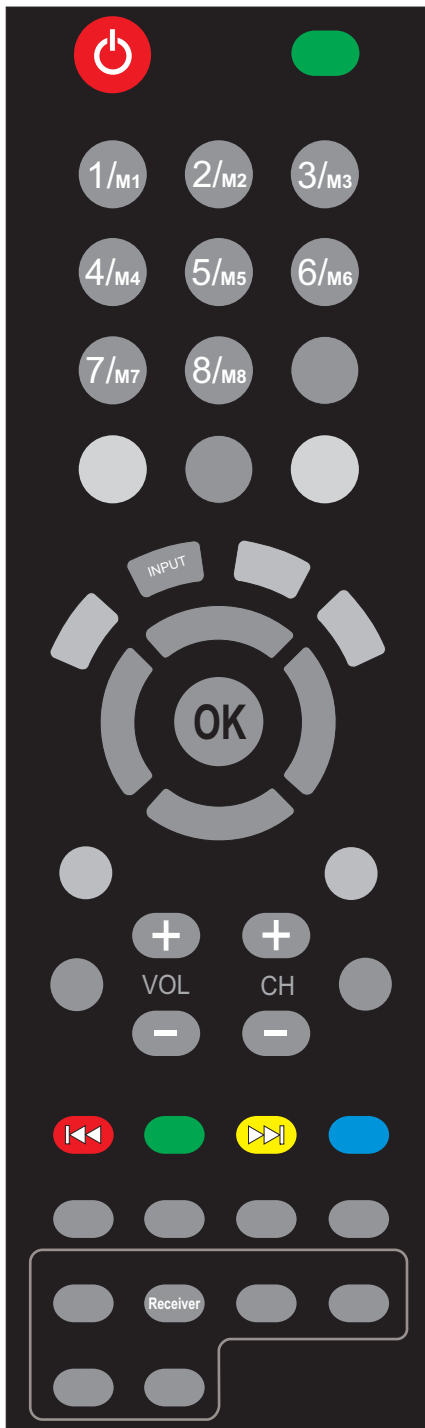



* Receiver only

press 




short press turns the unit on, long press takes it back into standby.



Powered on, a short press activates and deactivates mute*.

VOL  and  adjust the sound volume of the receiver, pre amplifier, integrated amplifier, or Juke Box and Juke Box Esprit.





selects the inputs and tuner mode in turns*.

Pressing (min. 3 seconds)  selects the tuning modes manual program search, automatic program search and Program selection from memory.


Automatic program search: CH  starts the automatic frequency scan downwards,  starts the scan upwards.



Manual program search:  decreases,  increases the reception frequency in 50kHz steps.

Program selection from memory:  -  activate the memory function. Access the presets 1 - 8 directly.

CH  and  select -memory function has to be activated- the memory positions 9 - 99.


Saving a program in the memory list: Tune to the

frequency to be stored. Press  twice in rapid succession.

CH  will select the next memory position up the list,  selects the next memory position down the list.

The memory positions 1 - 8 can be selected directly by

pressing  - .


Press  once again to store the program at that position.


Integrated CD-player








press 



 turns the unit on or back into standby.

 starts and pauses playback.



 stops playback.


 -  accesses a specific track directly and start playback.


Higher track numbers - for example, to play track 19,
press ,  and .

VOL  and  adjust the sound volume of the pre amplifier, integrated amplifier, receiver or Juke Box and Juke Box Esprit.

To step between tracks press  or .

Press and hold the button  for fast reverse scanning.
 activates fast forward scanning.

Pressing the  button repeatedly selects the repeat modes in turns. Selects random mode*.

Pressing  again takes the CD player back to standard playback.

* CD Box SE and CD Box DS only.

The Control it does not support the CD drive Pro-Ject CD Box RS.

Docking station



* Docking stations with volume control only.
No support of volume control with "all digital" units, such as iPhone 5®

press 





Dock Box S Fi - Turns the Dock Box off and the iPod® into standby.
Switches the Dock Box on. Any key (except ON/OFF) turns on the iPod®.

Dock Box S Digital - Turns the iPod®/iPhone® into standby.
To switch on press any key (except ON/OFF).

Dock Box Fi and **Dock Box Vi** - Turns the Dock Box on or back into standby.



activates and deactivates mute *.

VOL  and  adjust the sound volume of the docking station *.



starts and pauses playback.



Skips to the previous track .



skips to the next track.




restarts the current track in playback mode.

Press and hold the  button for reverse scanning, or the button  to start forward scanning.



starts repeat play for the current track. Pressing the button again starts repeat play for all tracks.

To deactivate repeat play press  once more.



activates and deactivates shuffle play.



shows the menu.

Returns to the previous step in the menu.

 
▲ and ▼ move the cursor up and down, to highlight the requested option.




selects or deselects the highlighted option.


Shows the next step in the menu.


Media Box

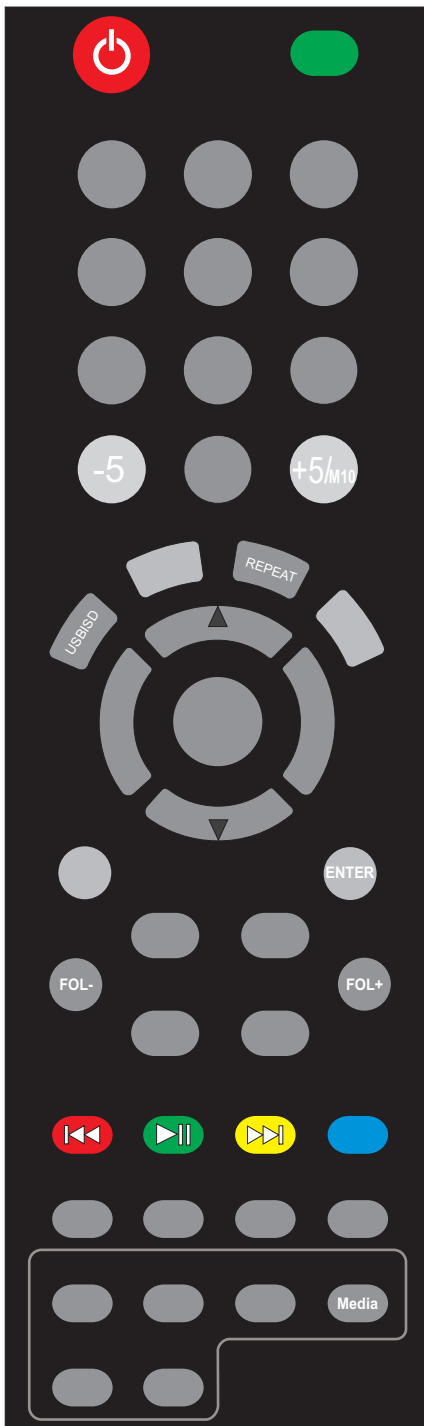



press 


 turns the unit on or back into standby.


 selects between card reader and USB.

 starts and pauses playback. Restarts playback from the same position after stopping.

 skips to the next track.


 restarts the current track in playback mode.



Press and hold the  button for reverse scanning, or the button  to start forward scanning.



Pressing the  button repeatedly selects the repeat modes in turns.

▲ and ▼ move the cursor up and down, to highlight the requested option.

 
▲ displays the play list in playback mode.

 displays the main menu. Selects the highlighted option, or modes in menus and submenus.

Press  or  to step between folders.

Press  or  to step between next/previous 5 entries of a folder.

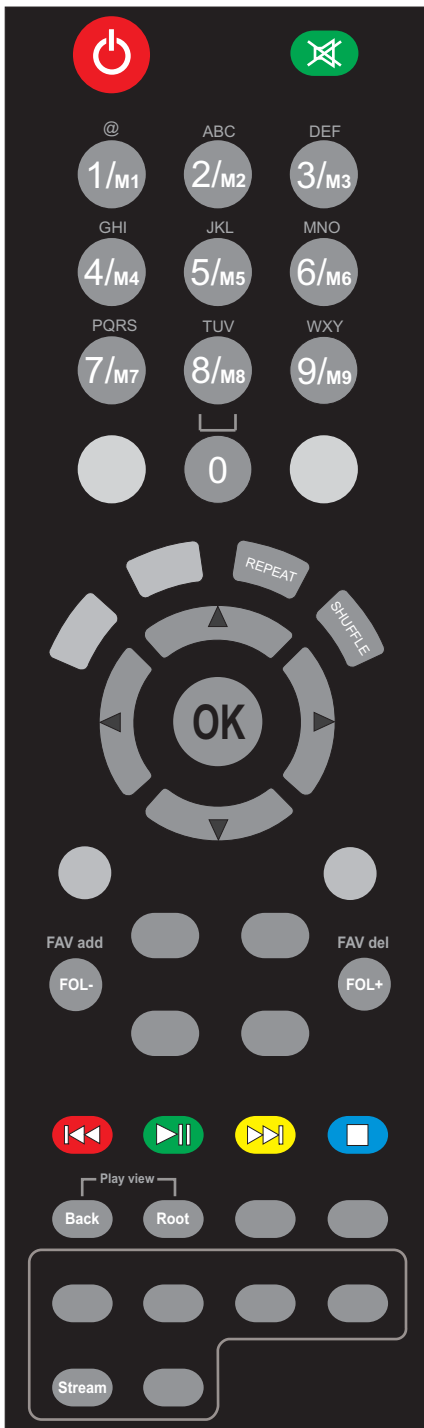

Stream Box




* Stream Boxes with volume control only


press 


 turns the unit on or back into standby.


VOL  and  adjust the sound volume of the Stream Box*.

 activates and deactivates mute.


 starts and pauses playback.


 stops playback.


 skips to the next track, picture or internet radio station.


 skips to the previous track, picture or internet radio station.


, ,  and  navigate the cursor.


 Calls up a submenu. Highlights and confirms a highlighted menu item.


 **Play view** jumps one step back in a menu.



 **Play view** calls up the root menu.

 activates and deactivates shuffle play.

Pressing the  button repeatedly selects the repeat modes in turns.

 **FAV add** adds a track or an internet radio station to the favourite list.

 **FAV del** removes a track or a internet radio station from the favourite list.

 -  keys for alphanumeric search and to enter the WLAN code.

Service

Should you encounter a problem which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Technical specifications

Batteries: 2 x AA / 1,5V
Dimensions W x H x D: 47 x 30 x 210mm
Weight: 105g

Replacing batteries

Proceed as follows:

- Unlock and remove the battery case cover
- Replace the batteries.
Make sure the batteries are the right way round !
- Refit the battery case cover



Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.

Copyright

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH
Copyright © 2012. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

The manufacturer reserves the right to alter the technical specifications without notice.