



BY PRO-JECT AUDIO SYSTEMS

# INSTRUCTIONS FOR USE Pro-Ject Media Box S

Dear music lover,

thank you for purchasing a Media Box S from Pro-Ject Audio Systems.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



*Warning of a hazard for the user, the unit or possible misuse.*




*Important notice.*

## Help to protect the environment

If you are not going to use the player for an extended period of time, e.g. vacation, we suggest to disconnect it from the AC mains. Please be certain that the player is in standby-mode prior to unplugging the power supply from the AC mains.

## Connectors

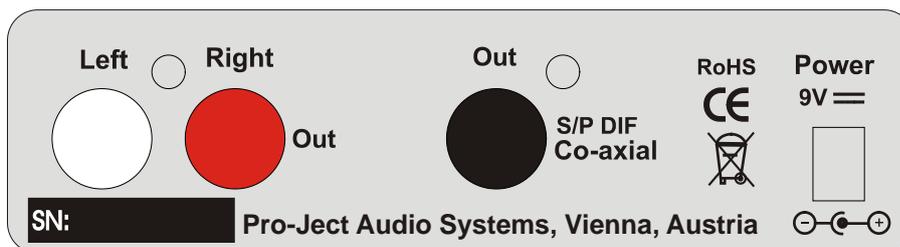

*Make all connections whilst the Media Box S is disconnected from the power supply.*



*Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.*

## Connection to the amplifier

Connect the **Left/Right Out** socket to a line input (such as **AUX**) on your amplifier.


## Connection to a external A/D-converter

Connect the **Out S/PDIF** socket to a coaxial digital input on the D/A converter or AV processor. Doing so allows you to use the digital signal for further processing. To activate **S/PDIF**, you need to select **S/PDIF** instead of **ANALOGUE** as output in the main menu.

## Mains power connection

The unit is supplied with a power supply suitable for your country's mains supply. Check the label before connecting to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the **Power 9V** socket before connecting the power supply to the mains.

## Remote control

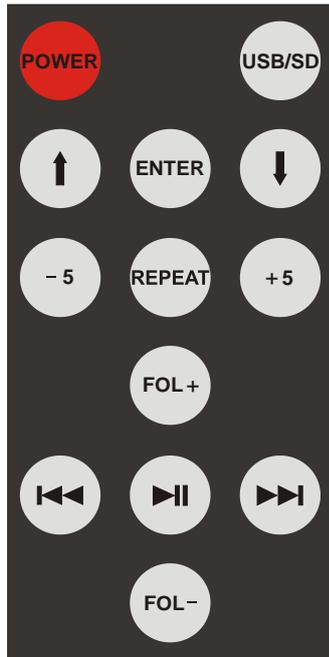

### To switch on from standby or to standby

 turns the unit on or back into standby

### Input selection

 selects between card reader and USB

### Navigating the menu, playlist, main menu

 and  move the cursor up and down, to highlight the requested option.

 displays the playlist

 displays the main menu. Selects the highlighted option, or modes in menus and submenus.

## Play / Pause



starts and pauses playback. Restarts playback from the same position after stopping.

While playback and pause, the display shows the repeat play and the shuffle mode, the data format (MP3) and the selected input (card reader/USB).

## Repeat and shuffle play



as a default setting the unit is in "repeat all" mode (**RP.ALL**). Repeatedly pressing selects the different repeat and shuffle play modes: "repeat folder" (**RP.Fol**), "repeat track" (**RP.One**), "random play - all tracks" (**Rand.A**), "play all tracks" (**PL.ALL**), "play all tracks in folder" (**PL.Fol**) and "play current track" (**PL.One**).

## To select a folder and switching content within a folder

Press  or  to step between folders

Press  or  to step between next/previous 5 entries of a folder.


## Stepping between tracks, reverse and forward scanning

 skips to the previous track.  skips to the next track

 restarts the current track in playback mode

Press and hold the  button for reverse scanning, or the button  to start forward scanning.

## Front panel controls

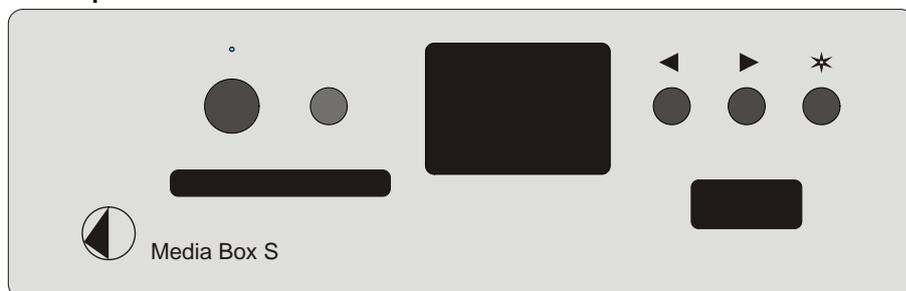

## To switch on from standby or to standby

The button on the left hand side will toggle the player between its fully operational status and standby. If there is no SD card inserted, or no USB-device connected, the unit will return to standby automatically. After switching to standby, the display shows the current software version.

The display shows **STANDBY** when the unit is in standby. The blue LED on the front panel shows that the unit is powered on.

## Navigating the menu and playlists, main menu

◀ and ▶ moves the cursor up and down, to highlight the requested option in menus and playlists.  
★ displays the main menu and starts playback of a selected track in a playlist.

## Play / Pause

Pressing ★ starts and pauses playback. Restarts playback from the same position after stopping.  
◀ displays the playlist. ★ starts playback of a selected track in a playlist.

## Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.  
Make sure the battery is the right way round !
- Close the battery case cover

Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



*Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.*

## Technical specifications Pro-Ject Media Box S

Supported audio formats:	MP3, WMA, AAC with iTunes tags (.m4a, maximum sampling frequency 48kHz, max. Data rate 320kbit / s). No DRM support
USB-input:	High-Speed 2.0. Typ A-socket. Suitable for flash drive and hard disk (with power out for hard disk drive)
Accepted hard disk drive format:	FAT 32 (no NTFS support)
Card reader:	SD card (secure digital), max. 32GB
Line-level output:	1 pair RCA/Phono sockets
Output voltage:	max. 1Vrms
Noise floor	100dB/1V
Digital output:	co-axial (S/PDIF)
D/A-converter:	Texas Instruments TLV320AIC23B. 24Bit/96kHz, upsampler
Outboard power supply:	9V/2A DC, suitable for your country's mains supply
Power consumption:	9V/1,8A DC max. – with hard drive connected
Replacement battery remote control:	1 x CR2032 / 3V or 1 x CR2025 / 3V
Dimensions W x H x D (D with sockets):	103 x 36 x 103 (109)mm
Weight:	550g without power supply

## Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

## Warranty



*The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons, release the manufacturer from any liability over and above the lawful rights of the customer.*

## Copyright

Pro-Ject Audio Systems is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Pro-Ject Audio Systems  
Copyright © 2015. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.