

Dear music lover,

thank you for purchasing an universal remote from Pro-Ject Audio Systems.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



Warning of a hazard for the user, the unit or possible misuse



Important notice

Safety instructions



Avoid letting liquids enter the device. Never spill any liquid on the device.

The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

	Power Buttons Amp: Turns on/off amplifiers and preamplifiers CD: Turns on/off CD players Tuner: Turns on/off Tuners Please note: Tuner Box S and S2 cannot be turned off using the Control it 2. Once turned on, repeated presses of the on/off button mute and unmute the Tuner Box. Tuner Tuner Box S3 DAB+: Arrow keys and OK are used for navigation. Please refer to Tuner Box S3 DAB+ manual for details. Tuner Box S2: Automatic tuning: arrow keys up/down Manual tuning: arrow keys left/right Please note: Control it 2 supports Tuners, but does not provide all functions that are found on original Tuner Box remote controls. It provides functions for basic operation only. CD - previous track/press and hold for fast scanning - starts & pauses the playback - next track/press and hold for fast scanning - selects the playback setting (normal, repeat one, repeat all) - stops the playback (Press 2x = CD eject) Amplifier/Preamplifier - turns the volume down - turns the volume up - selects the input down - selects the input up - activates and deactivates mute
--	--

Compatible Box Design devices:

CD players: CD Box E, S, S2, S3, DS, DS2 T, DS3

Amplifiers: MaiA S, S2, S3, DS3; Stereo Box E, S2, S2 BT, S3 BT, DS, DS2, DS3, RS; Uni Box S3

Preamplifier: MaiA Pre; Pre Box S2 Analogue, S3, DS, RS

Tuner: Tuner Box S, S2, S3 DAB+

Please note:



- Control it 2 supports Tuners, but does not provide all functions that are found on original Tuner Box remote controls. It provides functions for basic operation only.
- Mute button is not working for S, S2, DS, DS2 RS devices
- S3 & DS3 devices may need a firmware upgrade to activate the muting button functionality

Replacing batteries

Proceed as follows:

- Unscrew the bottom of the remote control
- Replace the batteries. Make sure the batteries are the right way round!
- Reassemble the remote



Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.

Technical specifications Control it 2

Materials:	full aluminium body, ABS keys
Weight:	77.5g (without batteries)
Dimensions (HxWxD):	158mm x 39mm x 16mm
Batteries:	2x AAA (not included in packaging)

Service

Should you encounter a problem, which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons, release the manufacturer from any liability over and above the lawful rights of the customer.

Copyright, trademarks

Pro-Ject Audio Systems is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Pro-Ject Audio Systems
Copyright © 2026. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.